



STRAP LATCH INSTALLATION

Part # 20-02504-91 (Medium Length Strap)
Bestop Part # 74600-01

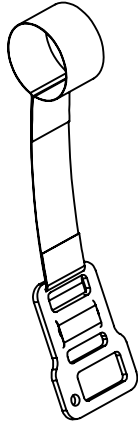


1 x2
Strap Latch Assembly

Remove PT screws and wedges using a T-20 Torx driver. Be careful not to strip the screws.

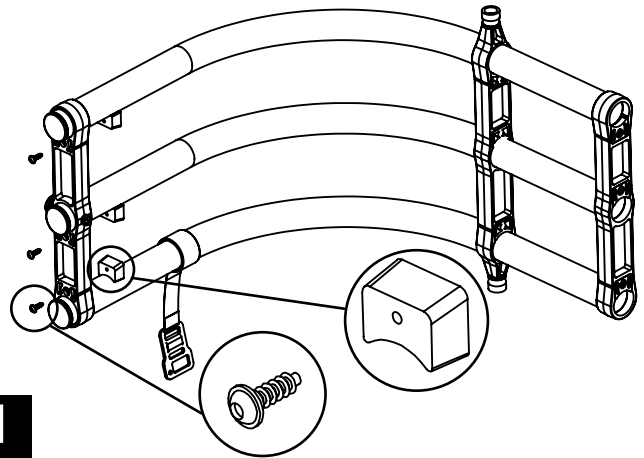


1

Remove the 1/4-20 screw with a #2 Phillips screw driver.

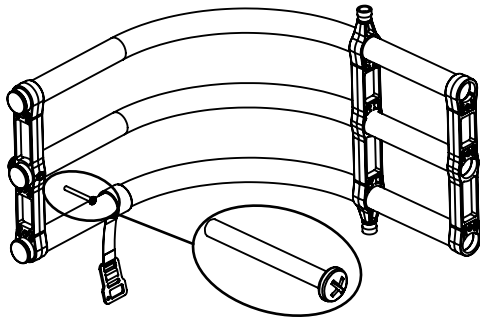


2

Remove the pivot upright.

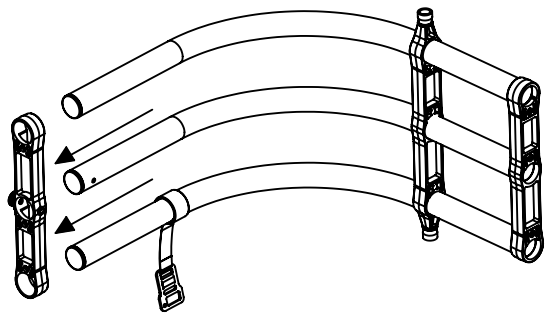


3

Remove the strap latch retainer and strap latch assembly.

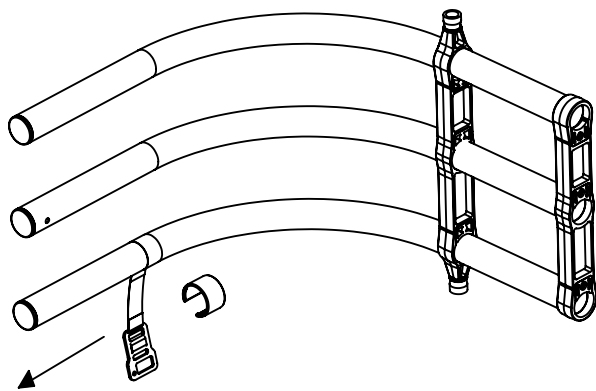

4

Replace with new strap latch assembly and retainer and assemble in reverse order. Repeat for other side.

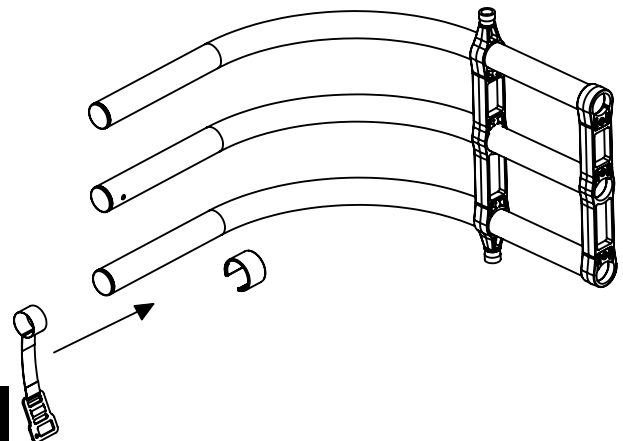

5